


## QUICK CARD

### OTU-8000 Network Configuration

This document will show you how to view and edit the OTU-8000 network configuration.



#### MAKE PHYSICAL CONNECTION

1. Connect Ethernet cable from  (BCK/LOC) port to laptop.

2. Press  (Local) button.


3. Once unit is in local mode the 'Main' LED

will begin blinking . Blinking will continue while unit is in Local mode.

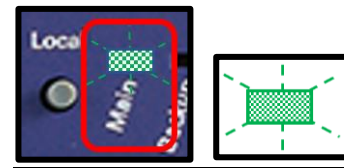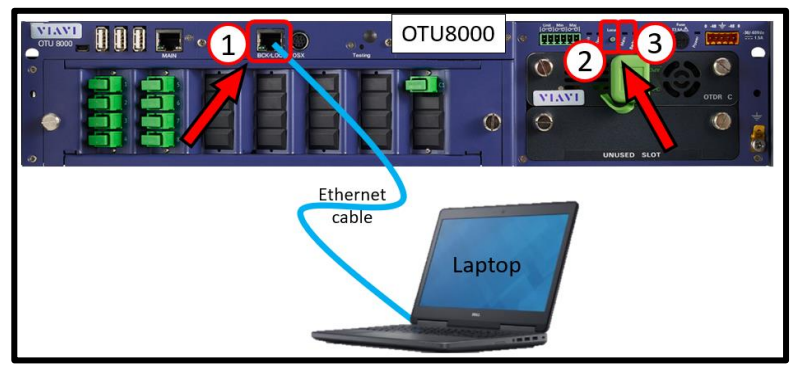

#### LOG IN / VIEW NETWORK CONFIGURATION


\*\*You will need to set your laptop Ethernet port to 192.168.1.x to connect to OTU. Using a web browser, go to 192.168.1.1 and hit Enter. Login screen will appear once connected.

1. Type in Login and Password information.
2. Tap  (Connect)



Once logged in you will be on the **Monitoring view**.


3. Tap  (Setup) icon

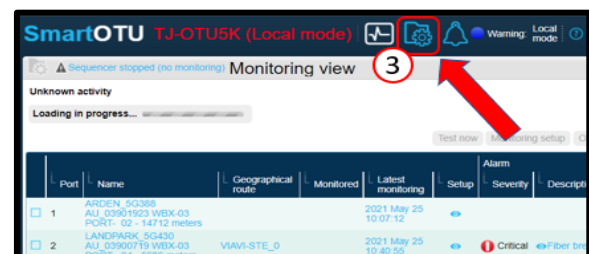

## QUICK CARD



You are now in the **Setup view**.

- In the **Network** (Network) section you can VIEW the network address settings.

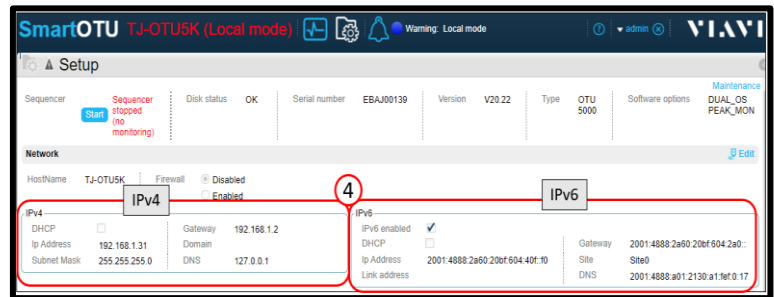


## EDIT NETWORK CONFIGURATION

- In the **Network** (Network) section, on right side, tap **Edit** (Edit).
- Enter network information in the appropriate section (IPv4 or IPv6).  
\*\*NOTE\*\* The Gateway and DNS addresses are very important and specific to IPv4 and IPv6. Please be sure these addresses are correct.
- When finished, tap **Save** (Save) on right side of screen.

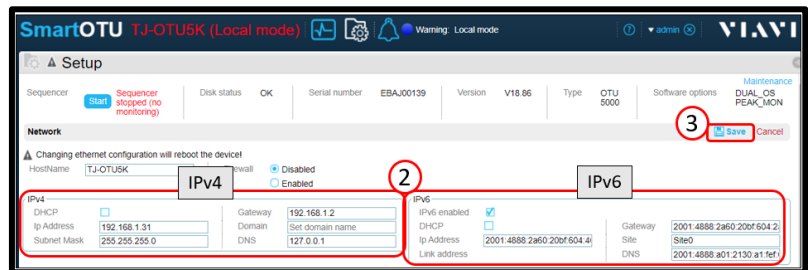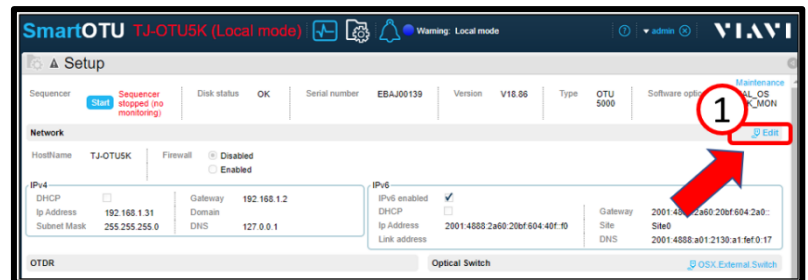

If you changed any network information a pop-up window will appear telling you that the unit needs to reboot.

- Tap **Yes** (Yes) to save changes and reboot unit.

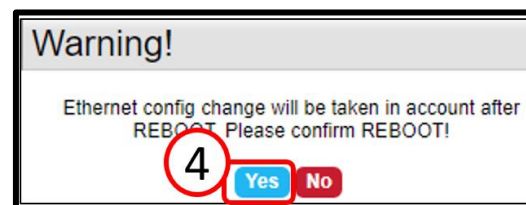

## QUICK CARD

### VERIFY NETWORK CONFIGURATION


The Login screen will appear once unit reboots.

1. Type in Login and Password information.
2. Tap **Connect** (Connect)




Once logged in you will be on the **Monitoring view**.

3. Tap  (Setup) icon

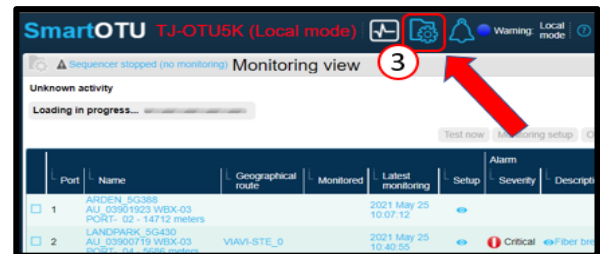

You are now in the **Setup view**.

4. In the **Network** (Network) section you can verify the network address settings

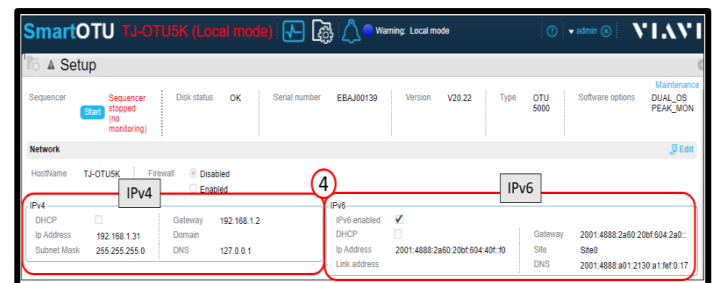

### TERMINATE LOCAL MODE

Once all Network config work is completed:

1. Disconnect Ethernet cable from (BCK/LOC) port.
2. Press (Local) button.
3. Verify 'Main' LED is now solid green which indicates it is in normal (non-Local) mode.

