

OneAdvisor 800 All-in-one Network Tester



QUICK CARD

Using the Android Mobile Tech App

This quick card outlines how to use the Mobile Tech App (MTA) on an Android smartphone or tablet to download test reports from an OneAdvisor 800 (ONA-800) network tester .




ENABLE BLUETOOTH ON THE OneAdvisor 800

1. Press {Home} and tap the System icon on the ONA-800.
2. Tap the Bluetooth Icon
3. Check "Enable Bluetooth"
4. Check "Allow other devices"

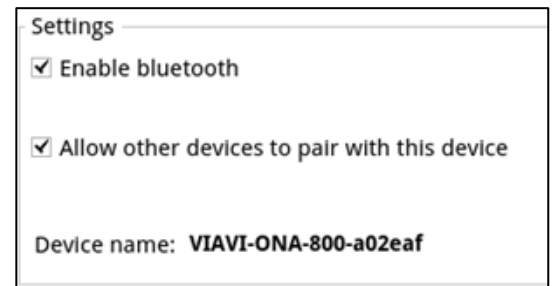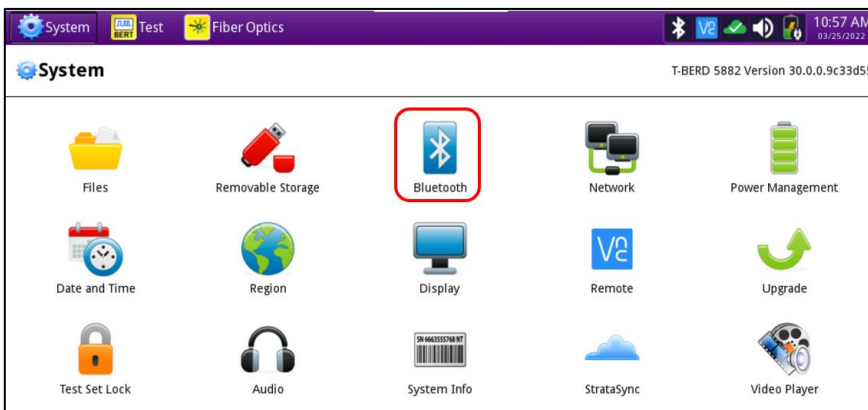

LAUNCH THE MOBILE TECH APP ON ANDROID



1. From the Google Play Store, search for "Viavi".
2. Install and Open the Viavi **Mobile Tech** app.
3. Select **[LOCAL MODE]**.

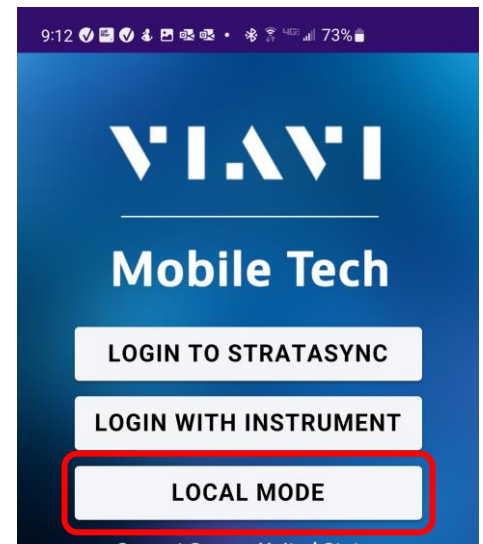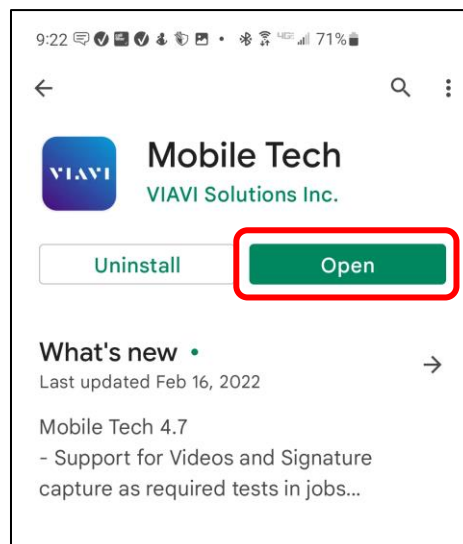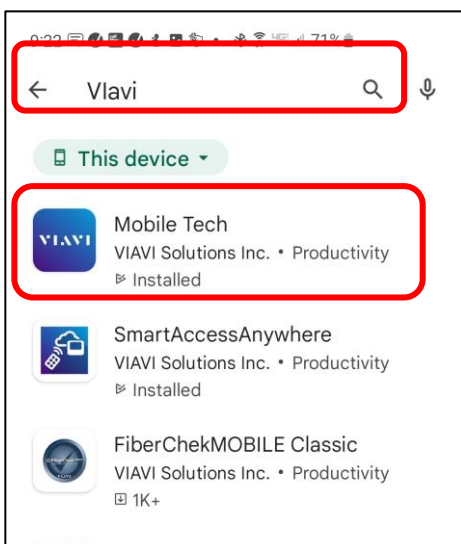

QUICK CARD


PAIR ANDROID WITH OneAdvisor 800

1. In the Mobile Tech app, the OneAdvisor 800 appears under “**Other Devices**”
2. Press [**CONNECT**] and select “**Pair**” from MTA app.
3. Select “**Pair**” on the OneAdvisor 800.

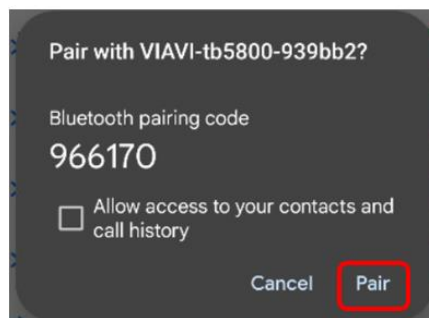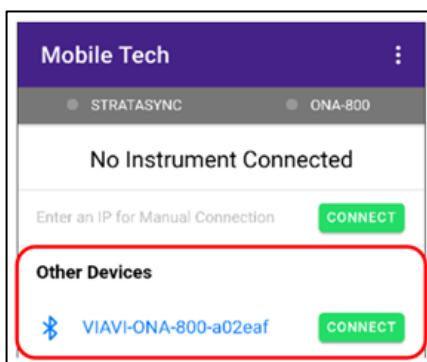


DOWNLOAD REPORT(S) FROM THE OneAdvisor


4. Press the **ONA-800 Files** button.

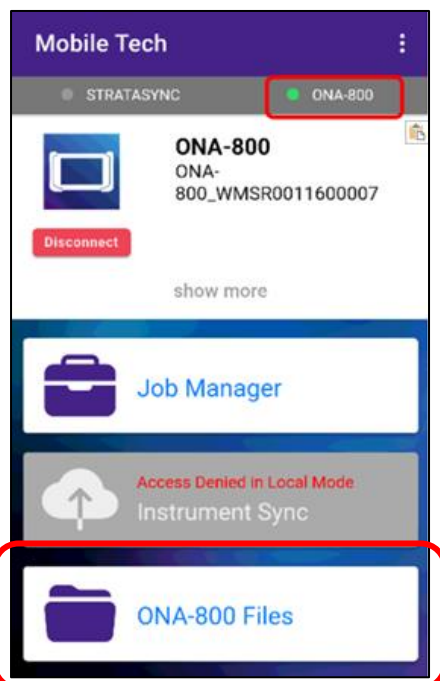

5. Select the “**Radio Analysis or CAA**” folder.




6. Select the “**Internal**” subfolder.



7. Press a down-arrow to download the test report.



8. A green checkmark indicates the file has been downloaded.

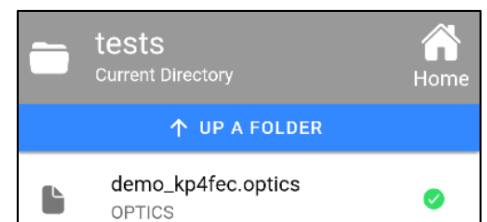


QUICK CARD


EMAIL THE TEST REPORT

1. To email a file from the Mobile Tech app, press **<Back** to return to main menu.


2. Press [**Mobile Tech Files**] to view downloaded files.

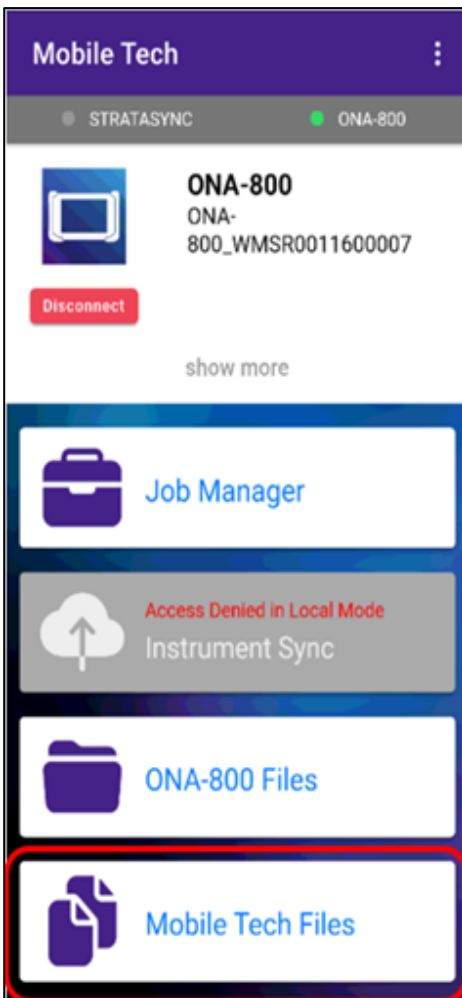


3. Press the up-arrow icon next to the desired file.

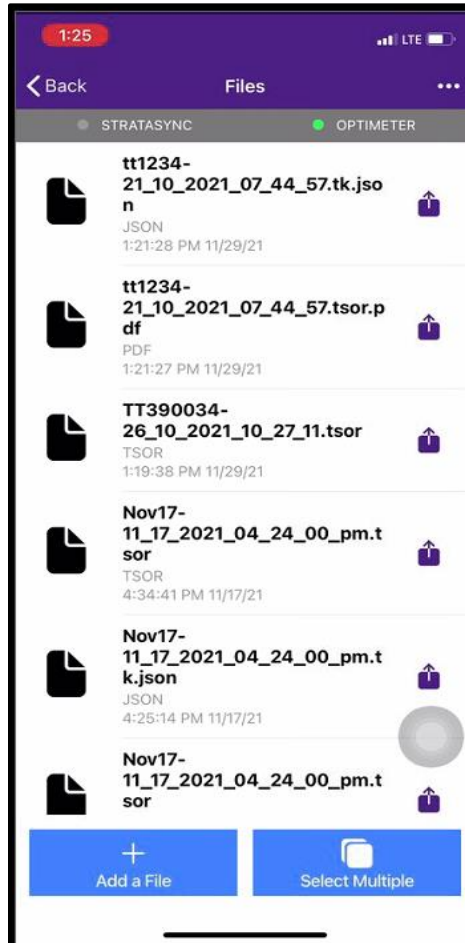

4. In pop-up, choose [**Export to another app**]

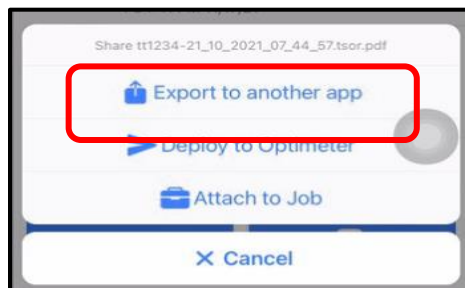

5. Select preferred method to send file: email, text, etc.

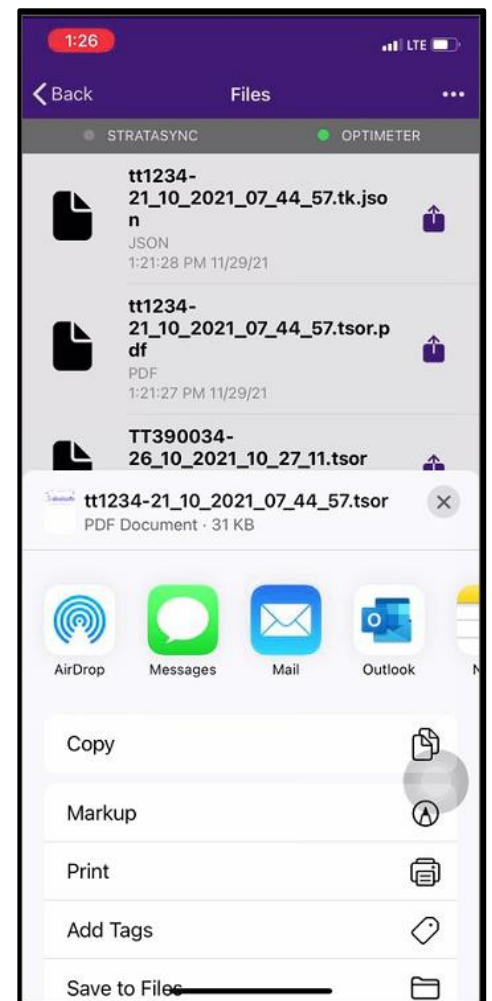

6. Send the file using the selected application.