



QUICK CARD

Using the Apple Mobile Tech App

This quick card outlines how to use the Mobile Tech App (MTA) on an Apple smartphone or tablet to download and email test reports.

ENABLE BLUETOOTH ON THE T-BERD 5800

1. Tap the System icon at the top of the screen.
2. Tap the Bluetooth Icon.
3. Check "Enable Bluetooth".
4. Check "Allow other devices".

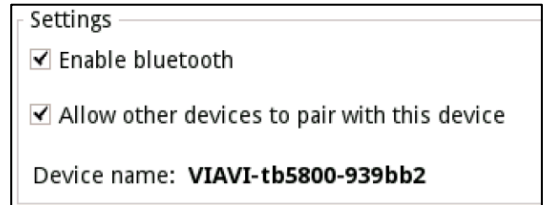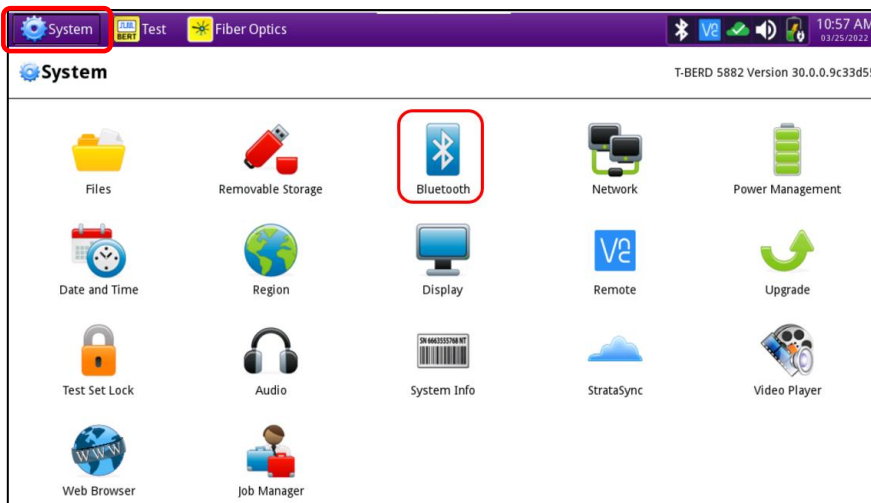

PAIR Apple WITH T-BERD 5800

1. In the Apple device, Opens Setting and Bluetooth. Search for the Viavi-tb5800-xxxx.
2. Search for Viavi-tb5800-xxxx.
3. Connect to Viavi-tb5800-xxxx.






QUICK CARD

LAUNCH THE MOBILE TECH APP ON Apple


LAUNCH THE MOBILE TECH APP ON Apple

1. From the App Store, search for “**Viavi**”.
2. Install **Mobile Tech**
3. Select **[LOCAL MODE]**.
4. Select **[VIAVI-tb5800-xxxx]**.

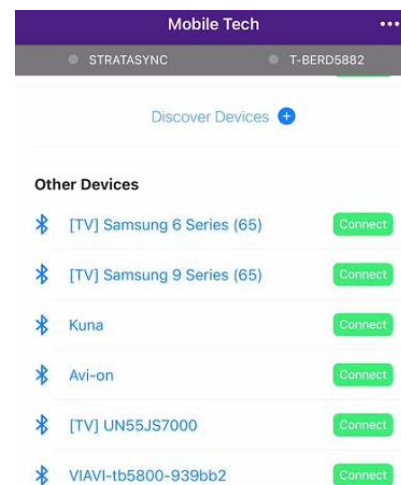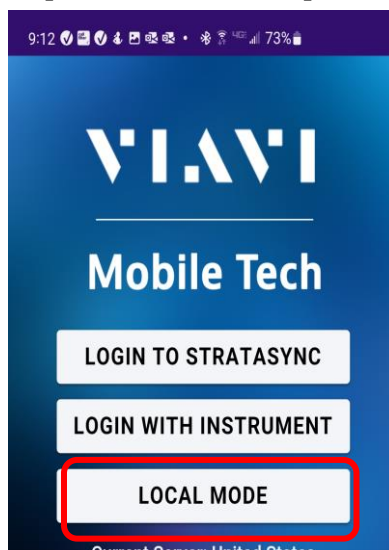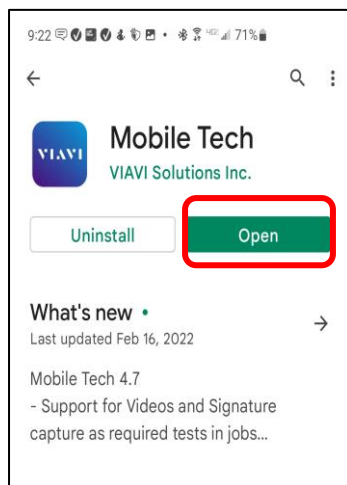

DOWNLOAD REPORT(S) FROM THE T-BERD

1. Press the **T-BERD58xx Files** button.

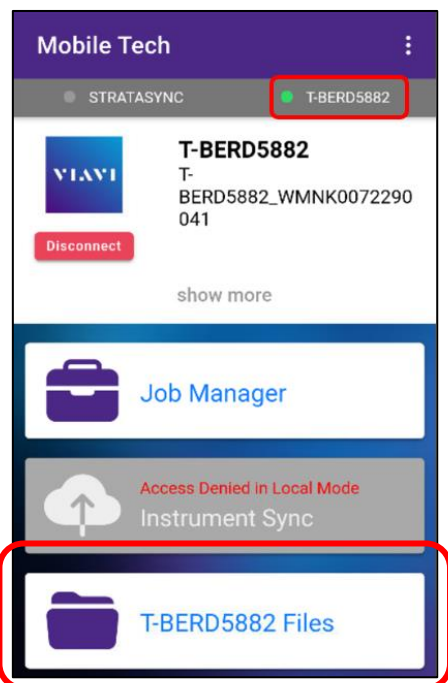

2. Select the “**bert**” folder.




3. Select the “**tests**” subfolder.



4. Press a down-arrow to download the test report.




5. A green checkmark indicates the file has been downloaded.

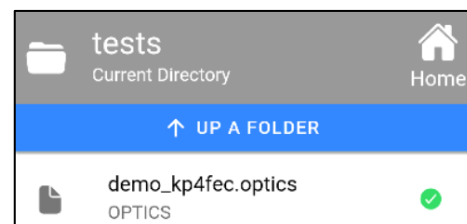


QUICK CARD

EMAIL THE TEST REPORT


1. To email a file from the Mobile Tech app, press **<Back** to return to main menu.




2. Press [**Mobile Tech Files**] to view downloaded files.

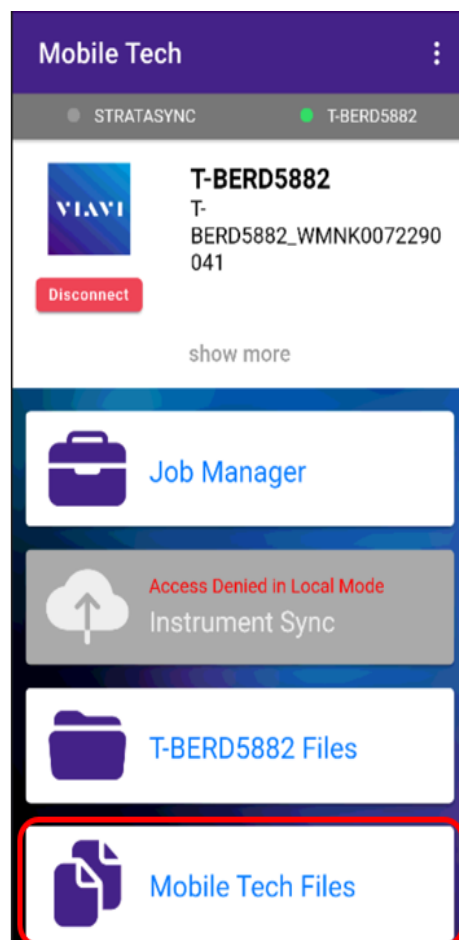


3. Press the up-arrow  next to the desired file.

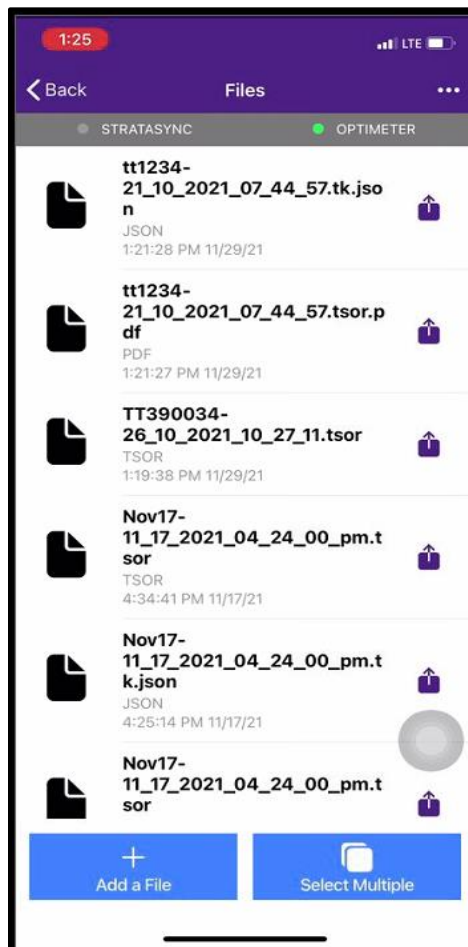

4. In pop-up, choose [**Export to another app**]

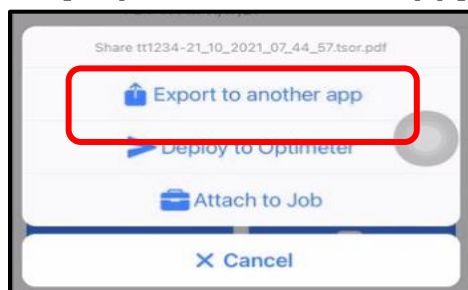

5. Select preferred method to send file: email, text, etc.

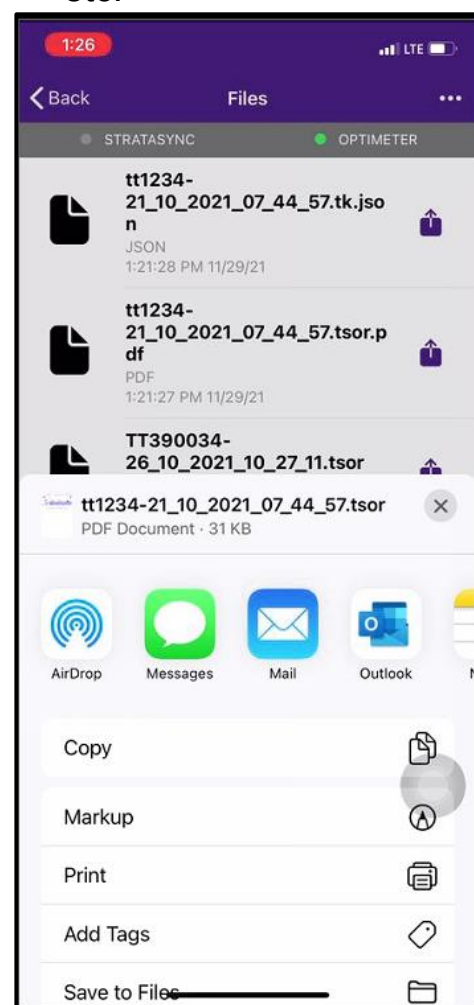

6. Send the file using the selected application.