



Quick Card: Using J-Reporter to Import Test Results from Certifier

Equipment required:

- PC running latest version of J-Reporter (<http://j-reporter.updatemyunit.net/>)
- Mini-USB cable
- Local Certifier with test results

CAUTION!

- Using a cable other than a mini-USB cable may results in damage to the Certifier mini-USB port.
- Such damage is NOT covered under warranty



Figure 1: Side panel of Certifier. (Mini-USB on right)



Figure 2: Mini-USB cable

Process:


Launch J-Reporter	
Create a new project ⁱ File New Project Select location to save project Must be on local drive	



Connect Certifier to PC using mini-USB cable (as shown in figure 2)
NOTE: Windows Mobile Device Center may launch. If so, click on “Continue without setting up your device”



The bottom right of J-Reporter will show “Connected” – if it does not, click on the down arrow and select “Connect to Device”

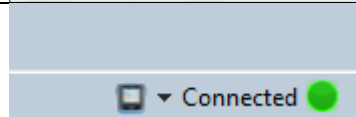


With the project you wish to report results into selected, select Import | Device, or simply click on the instrument icon on the task ribbon




Select which site(s) on the instrument you wish to import results from.
Click on “Import Selected”
Alternatively you can chose to select Import All to import results from ALL sites

You will be prompted to “click OK button to import”

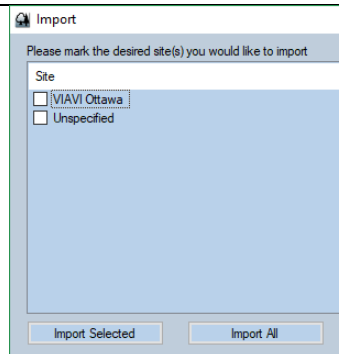

View, sort, filter, change administrative items such as labels, and generate reports (see J-Reporter User Manual for detailed instructions)

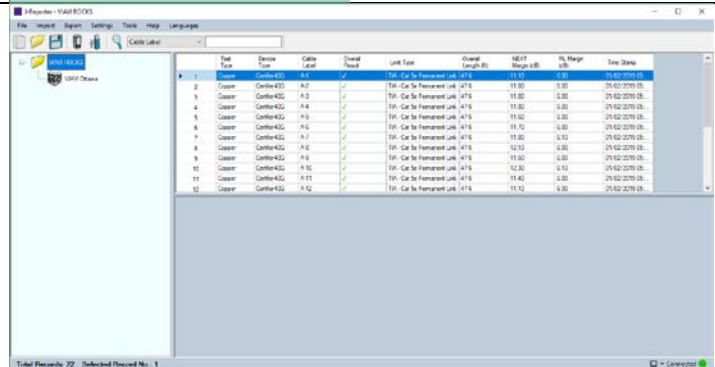

Once done, J-Reporter can be closed. There is no need to save as the file auto-saves.
To share the results in their native format, locate the .PRX project file. E-mail, upload to cloud, save to USB, attach to work order, etc.

ⁱ NOTE: The project name and file location is your choice. Some chose to create a single project file for a day/week/month. Others chose to create a single project file for each job. Individual sites from the Certifier will show up as sites under the project. You can have multiple projects open at one time.